

ATW-KNX-01

Technical Catalogue

ATW-KNX-01



Contents

Presentation	1
Connection	2
Installation and setup	3
ETS parameters and communication objects	4
Technical specifications	5
Compatible Air-to-water (A.W.) units	6
Error codes	7
Communication objects description table	8

General index

1.	Presentation.....	1
1.1	Presentation.....	2
1.1.1	General features.....	2
2.	Connection.....	3
2.1	Connection.....	4
3.	Installation and setup	5
3.1	Installation and setup.....	6
4.	ETS parameters and communication objects	7
4.1	ETS parameters and communication objects.....	8
4.1.1	Default settings.....	8
4.2	General dialog	10
4.2.1	System working mode	10
4.2.2	2nd circuit (C2) is available	11
4.2.3	DHW is available (Domestic Hot Water).....	12
4.2.4	Swimming pool is available	13
4.2.5	Enable use of extra information objects (for status).....	13
5.	Technical specifications	15
5.1	Technical specifications	16
6.	Compatible Air-to-Water (ATW) units	17
6.1	Compatible Air-to-Water (ATW) units.....	18
7.	Error codes	19
7.1	Error codes	20
8.	Communication objects description table	21
8.1	Communication objects description table	22
8.1.1	Control objects	22
8.1.2	Status objects.....	23


1 . Presentation

Index

1.1. Presentation	2
1.1.1. General features.....	2



1.1 Presentation

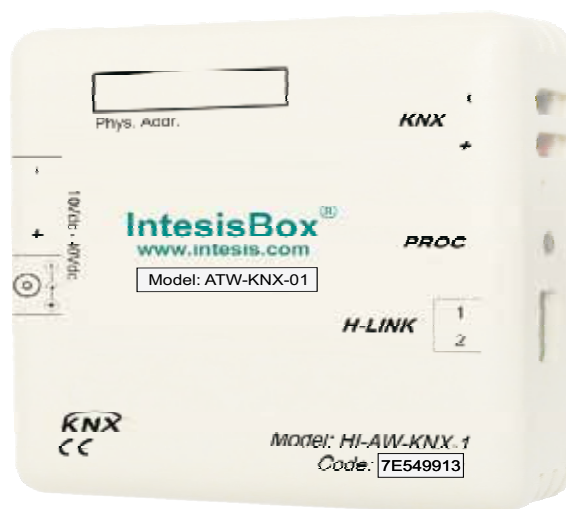

The ATW-KNX-01 gateway allows fully bidirectional monitoring and control of the Hitachi Air-to-Water systems from KNX installations.

The interface is intended to be used with Yutaki series. Check chapter 6 for models compatibility.

1.1.1 General features

- Reduced dimensions, easy and fast installation.
- Multiple control and status objects (bit, byte, characters...) with standard KNX datapoints.
- One status object available for each control object.
- Control on the Air to Water unit based on the ambient temperature read from the unit itself or from the temperature read by any KNX thermostat.
- The Hitachi Air to Water can be controlled simultaneously through the remote controller of the Air to Water system or through the KNX bus.
- Total supervision and control of the Hitachi Air to Water unit from KNX, including unit internal variables supervision, special modes control (such as Anti-legionella) and error alarm and codes too.



NOTE

This device is equivalent to HI-AW-KNX, therefore, some related information can be provided making reference to any of both devices (ATW-KNX-01 or HI-AW-KNX).

2. Connection

Index

2.1. Connection 4




2.1 Connection

Connection of the interface to the AW indoor unit is by means of the cable supplied with the indoor unit to connect the remote controller. It must be connected to the interface in one side (connector H-Link) and to the internal electronic board of the Air-to-Water indoor unit in the other side.

Connection of the interface to the KNX bus is by means of the standard KNX bus connector also supplied with the interface.

In order to plug the interface to the external power supply, two different methods are available. First one is using the external power supply provided with the interface using the DC JACK connector.

Connections diagram:

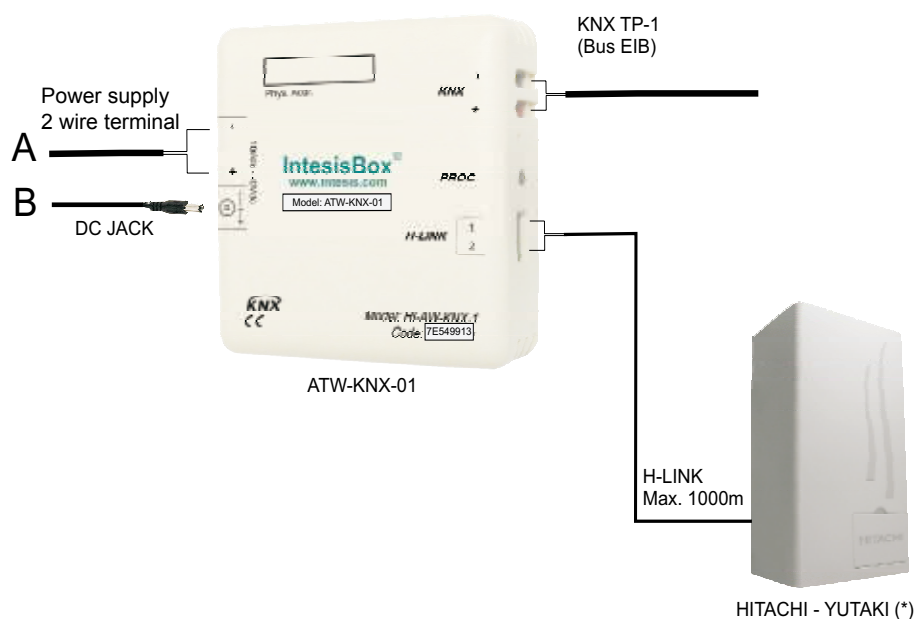

NOTE

- Connect only one external power supply. Use either the two-wire terminal connector (A) or the DC adaptor Jack connector (B).
- (*) Yutaki S example:
Terminal board 2: Terminals 1 and 2.

3. Installation and setup

Index

3.1. Installation and setup 6



3.1 Installation and setup

This is a fully compatible KNX device that must be configured using the ETS software.

The ETS database can be downloaded from:

http://www.hitachiaircon.es:8080/HapeWeb/ATW-KNX-01_v0.2.

Please, check the README.txt file located inside the zip file to find instructions for proper installation of the database.



NOTE

Do not forget to select the corresponding features of the Air-to-Water system connected to the ATW-KNX-01 interface. This should be selected in the "Parameters" section on the ETS software.

4 . ETS parameters and communication objects

Index

4.1.	ETS parameters and communication objects.....	8
4.1.1.	Default settings.....	8
4.2.	General dialog.....	10
4.2.1.	System working mode	10
4.2.2.	2nd circuit (C2) is available	11
4.2.3.	DHW is available (Domestic Hot Water).....	12
4.2.4.	Swimming pool is available	13
4.2.5.	Enable use of extra information objects (for status)	13

4

4.1 ETS parameters and communication objects

4.1.1 Default settings

When importing the ETS database for the first time, the following menu appears, with these parameter values selected as default:



With this configuration is possible to control the system (Control_ objects) and monitoring it (Status_ objects) through the following communication objects:

- Run or Stop the unit

■ ↕ 0: Control_ Unit Run/Stop [DPT_1.010] - 0-Stop;1-Run

This object allows to run or to stop the Hitachi unit features (C1,C2, DHW and/or SwimPool) at once. Sending a “0” value will turn them off, while sending a “1” value will turn them on.

- Change de Unit mode

■ ↕ 1: Control_ Unit Mode [DPT_1.100] - 0-Cool;1-Heat

■ ↕ 33: Status_ Unit Mode [DPT_1.100] - 0-Cool;1-Heat

This object allows changing the working mode of the Hitachi unit. Sending a “0” value the unit will turn into “Cool” mode, while sending a “1” value will make the unit turn into “Heat” mode.

- Run or Stop the C1 Circuit

■ ↕ 2: Control_ C1 Run/Stop [DPT_1.010] - 0-Stop;1-Run

■ ↕ 34: Status_ C1 Run/Stop [DPT_1.010] - 0-Stop;1-Run

This object allows to run or to stop the Hitachi C1 Circuit (or C1 climate zone). Sending a “0” value will close the C1 circuit, while sending a “1” value will open the C1 Circuit.

More functions related with the C1 circuit and their communication objects can be seen in section System working mode.

- Anti-legionella System



NOTE

The anti-legionella function is hidden to users by default. Installer can make it available if desired.

■ ↕ 30: Control_ AntiLeg Run/Stop [DPT_1.010] - 0-Stop;1-Run

■ ↕ 31: Control_ AntiLeg Setpoint [DPT_9.001] - °C

■ ↕ 64: Status_ AntiLeg Run/Stop [DPT_1.010] - 0-Stop;1-Run

■ ↕ 65: Status_ AntiLeg Setpoint [DPT_9.001] - °C

The Hitachi Yutaki units include an Anti-legionella system. From the gateway, this function can be activated by sending a “1” value to the Control_ AntiLeg Run/Stop object and can be stopped by sending a “0” value to the same object.

It is also possible to send a value to set the temperature of the Anti-legionella system to this value. To do it so you have to use the Control_ AntiLeg Setpoint object.

**CAUTION**

Anti-legionella will set the water temperature to the setting value during the specified time. This temperature will be dangerous to the user and could burn him or her. Installer is responsible for configuring it properly, advising the user, and enabling the function.

- KNX menu blocking

➡ 32: Control_ KNX Blocks/Enables Menu [DPT_1.003] - 0-Block;1-Enable

➡ 66: Status_ KNX Blocks/Enables Menu [DPT_1.003] - 0-Block;1-Enable

This object allows blocking or enabling the KNX menu from Hitachi's LCD panel. Sending a “0” value will block the Menu, while sending a “1” value will enable the Menu.

- Errors and Alarms

➡ 67: Status_ Error/Alarm [DPT_1.005] - 0-No alarm;1-Alarm

➡ 68: Status_ Error Code [2byte] - 0-No error/Any other see man.

These objects allows reading the system status indicating if any alarm or error is active (Status_ Error/Alarm) and, in case it exist, it indicates which error is (Status_ Error Code). See section 7 to get more information about the error codes.

4.2 General dialog

In the General Dialog (settings) tab, it is possible to enable, disable or modify the parameters shown in Figure 4.1. For instance, the first field is showing where you can download the database and the user manual from.



4.2.1 System working mode

This parameter enables or disables communication objects depending on the working mode selected: Water mode, Air, mode or Full (which includes both: Water and Air).



When selecting "Water" the interface will work for a water climate environment only. Water climate control and status objects will be available. Air climate control and status objects will be disabled.

- OTC Mode

The OTC mode (Output Temperature Compensation) allows keeping the desired indoor temperature despite external temperature variations.

From the gateway you can:

Turn this function off by sending a "1" value to the Control_ C1 OTC Mode Heat/Cool Off communication object.

- ➡ 3: Control_ C1 Heat OTC Mode Off [DPT_1.002] - 1-Set OTC Mode OFF
- ➡ 7: Control_ C1 Cool OTC Mode Off [DPT_1.002] - 1-Set OTC Mode OFF
- ➡ 35: Status_ C1 Heat OTC Mode Off [DPT_1.002] - 1-OTC Mode OFF is set
- ➡ 39: Status_ C1 Cool OTC Mode Off [DPT_1.002] - 1-OTC Mode OFF is set

Activate the different modes available for the calculus of the water temperature for the cooling or heating the facility where the unit is placed:

- Points: User fixes 4 points that will create a line function that will depend on the current ambient temperature.
- Gradients: In this case, the function used is not a line but a gradient. Only available for the Heat mode.
- Fix: The temperature adjustment is only performed by a fixed value. This makes the unit to keep this fixed value all the time

- ➡ 4: Control_ C1 Heat OTC Mode Points [DPT_1.002] - 1-Set OTC Mode POINTS
- ➡ 5: Control_ C1 Heat OTC Mode Grad [DPT_1.002] - 1-Set OTC Mode GRAD
- ➡ 6: Control_ C1 Heat OTC Mode Fix [DPT_1.002] - 1-Set OTC Mode FIX
- ➡ 8: Control_ C1 Cool OTC Mode Points [DPT_1.002] - 1-Set OTC Mode POINTS
- ➡ 9: Control_ C1 Cool OTC Mode Fix [DPT_1.002] - 1-Set OTC Mode FIX
- ➡ 10: Control_ C1 Thermo Setpoint [DPT_9.001] - °C
- ➡ 36: Status_ C1 Heat OTC Mode Points [DPT_1.002] - 1-OTC Mode POINTS is set
- ➡ 37: Status_ C1 Heat OTC Mode Grad [DPT_1.002] - 1-OTC Mode GRAD is set
- ➡ 38: Status_ C1 Heat OTC Mode Fix [DPT_1.002] - 1-OTC Mode FIX is set
- ➡ 40: Status_ C1 Cool OTC Mode Points [DPT_1.002] - 1-OTC Mode POINTS is set
- ➡ 41: Status_ C1 Cool OTC Mode Fix [DPT_1.002] - 1-OTC Mode FIX is set
- ➡ 42: Status_ C1 Thermo Setpoint [DPT_9.001] - °C

- Water mode temperatures

Using the following communication objects it is possible to control/monitorize water setpoint temperatures for the Heat and Cool modes (C1 Water Heat Setpoint and C1 Water Cool Setpoint)

- ↕ 12: Control_ C1 Water Heat Setpoint [DPT_9.001] - °C
- ↕ 13: Control_ C1 Water Cool Setpoint [DPT_9.001] - °C
- ↕ 44: Status_ C1 Water Heat Setpoint [DPT_9.001] - °C
- ↕ 45: Status_ C1 Water Cool Setpoint [DPT_9.001] - °C

When selecting “Air”, the interface will work for an air climate environment only. Air climate control and status objects will be available. Water climate control and status objects will be disabled.

- Air mode temperatures

 
With the communication objects corresponding to this mode enabled, control/monitoring of the setpoint temperature of the thermo (C1 Thermo Setpoint) and the ambient temperature provided by a thermostat not included in the Hitachi system (C1 Ambient Temp).

- ↕ 10: Control_ C1 Thermo Setpoint [DPT_9.001] - °C
- ↕ 11: Control_ C1 Ambient Temp [DPT_9.001] - °C
- ↕ 42: Status_ C1 Thermo Setpoint [DPT_9.001] - °C
- ↕ 43: Status_ C1 Ambient Temp [DPT_9.001] - °C

When selecting “Full”, the interface will work for an air and water climate environment. Air and Water climate control and status objects will be available

4.2.2 2nd circuit (C2) is available

This parameter enables or disables the Control_ and Status_ communication objects of a second circuit (or climate zone). In case the project is divided into 2 separated circuits this parameter needs to be selected to get control on each circuit independently.



When selecting “No”, the gateway will hide the 2nd circuit (C2) communication objects.

When selecting “Yes”, the gateway will show the the 2nd circuit (C2) communication objects. Depending on the other selected parameters, some objects will remain hidden and some others will be shown.

- Run and Stop status:

- ↕ 14: Control_ C2 Run/Stop [DPT_1.010] - 0-Stop;1-Run
- ↕ 46: Status_ C2 Run/Stop [DPT_1.010] - 0-Stop;1-Run

To activate or deactivat the 2nd circuit (C2) a “1” value or a “0” value needs to be sent respectively to the Run/stop communication object.

- If “Water” mode is selected



- ↕15: Control_ C2 Heat OTC Mode Off [DPT_1.002] - 1-Set OTC Mode OFF
- ↕16: Control_ C2 Heat OTC Mode Points [DPT_1.002] - 1-Set OTC Mode POINTS
- ↕17: Control_ C2 Heat OTC Mode Grad [DPT_1.002] - 1-Set OTC Mode GRAD
- ↕18: Control_ C2 Heat OTC Mode Fix [DPT_1.002] - 1-Set OTC Mode FIX
- ↕19: Control_ C2 Cool OTC Mode Off [DPT_1.002] - 1-Set OTC Mode OFF
- ↕20: Control_ C2 Cool OTC Mode Points [DPT_1.002] - 1-Set OTC Mode POINTS
- ↕21: Control_ C2 Cool OTC Mode Fix [DPT_1.002] - 1-Set OTC Mode FIX
- ↕24: Control_ C2 Water Heat Setpoint [DPT_9.001] - °C
- ↕25: Control_ C2 Water Cool Setpoint [DPT_9.001] - °C
- ↕47: Status_ C2 Heat OTC Mode Off [DPT_1.002] - 1-OTC Mode OFF is set
- ↕48: Status_ C2 Heat OTC Mode Points [DPT_1.002] - 1-OTC Mode POINTS is set
- ↕49: Status_ C2 Heat OTC Mode Grad [DPT_1.002] - 1-OTC Mode GRAD is set
- ↕50: Status_ C2 Heat OTC Mode Fix [DPT_1.002] - 1-OTC Mode FIX is set
- ↕51: Status_ C2 Cool OTC Mode Off [DPT_1.002] - 1-OTC Mode OFF is set
- ↕52: Status_ C2 Cool OTC Mode Points [DPT_1.002] - 1-OTC Mode POINTS is set
- ↕53: Status_ C2 Cool OTC Mode Fix [DPT_1.002] - 1-OTC Mode FIX is set
- ↕56: Status_ C2 Water Heat Setpoint [DPT_9.001] - °C
- ↕57: Status_ C2 Water Cool Setpoint [DPT_9.001] - °C

- If “Air” mode is selected:

- ↕22: Control_ C2 Thermo Setpoint [DPT_9.001] - °C
- ↕23: Control_ C2 Ambient Temp [DPT_9.001] - °C
- ↕54: Status_ C2 Thermo Setpoint [DPT_9.001] - °C
- ↕55: Status_ C2 Ambient Temp [DPT_9.001] - °C

- If “Full” mode is selected, all communication objects present when selecting “Water” or “Air” will be enabled for this mode too.

4.2.3 DHW is available (Domestic Hot Water)

This parameter enables or disables the Control_ and Status_ objects corresponding to the control and monitoring of a water tank or DHW system.



When selecting “No”, the gateway will hide communication objects related with the water tank or the Domestic Hot Water system.

When selecting “Yes”, the gateway will show the communication objects related with the water tank or the Domestic Hot Water system.

- Domestic hot water

By means of Control_ DHW Run/Stop and Control_ DHW Setpoint, it is possible to turn on/off the DHW system and also to control its setpoint temperature.

Through the Status_ DHW Temperature communication object, it is possible to read the instantaneous temperature of the DHW system.

- ↕ 26: Control_DHW Run/Stop [DPT_1.010] - 0-Stop;1-Run
- ↕ 27: Control_DHW Setpoint [DPT_9.001] - °C
- ↕ 58: Status_DHW Run/Stop [DPT_1.010] - 0-Stop;1-Run
- ↕ 59: Status_DHW Setpoint [DPT_9.001] - °C
- ↕ 60: Status_DHW Temperature [DPT_9.001] - °C

4.2.4 Swimming pool is available

This parameter enables or disables the Control_ and Status_ objects corresponding to the control and monitoring of a swimming pool system present in the project.

When selecting “No”, the gateway will hide communication objects related with the swimming pool.

When selecting “Yes”, the gateway will show communication objects related with the swimming pool.

- Swimming pool

By means of Control_ SwimPool Run/Stop and Control_ SwimPool Setpoint, it is possible to turn on/off the Swimming pool system and also to control its setpoint temperature.

Through the Status_ SwimPool Temperature communication object, it is possible to read the instantaneous temperature of the Swimming pool system.

- ↕ 28: Control_SwimPool Run/Stop [DPT_1.010] - 0-Stop;1-Run
- ↕ 29: Control_SwimPool Setpoint [DPT_9.001] - °C
- ↕ 61: Status_SwimPool Run/Stop [DPT_1.010] - 0-Stop;1-Run
- ↕ 62: Status_SwimPool Setpoint [DPT_9.001] - °C
- ↕ 63: Status_SwimPool Temperature [DPT_9.001] - °C

4.2.5 Enable use of extra information objects (for status)

These parameters enable or disable the Status_ communication objects related to the monitoring of extra information depending on the installed Hitachi model (Yutaki S or Yutaki S80).

When selecting “No”, the gateway will hide communication objects related with the extra information provided by the Hitachi units.

When selecting “Yes”, the gateway will offer you to select extra information for a Yutaki S80 model or the rest of Yutaki S models (then select “No”).

- If “No” is selected (the installed unit is not a Yutaki S80 model) communication objects providing extra information about the Yutaki S models will appear:

4

- ↕ 69: Status_ Operation State Unit On/Off [DPT_1.001] - 0-Off;1-On
- ↕ 70: Status_ Operation State Cool Demand [DPT_1.001] - 0-Off;1-On
- ↕ 71: Status_ Operation State Cool Thermo [DPT_1.001] - 0-Off;1-On
- ↕ 72: Status_ Operation State Heat Demand [DPT_1.001] - 0-Off;1-On
- ↕ 73: Status_ Operation State Heat Thermo [DPT_1.001] - 0-Off;1-On
- ↕ 74: Status_ Operation State DHW [DPT_1.001] - 0-Off;1-On
- ↕ 75: Status_ Operation State SwimPool [DPT_1.001] - 0-Off;1-On
- ↕ 76: Status_ Operation State Alarm [DPT_1.005] - 0-No alarm;1-Alarm
- ↕ 77: Status_ Outdoor Ambient Temp [DPT_9.001] - °C
- ↕ 78: Status_ Second Ambient Temp [DPT_9.001] - °C
- ↕ 79: Status_ Water Inlet Temp [DPT_9.001] - °C
- ↕ 80: Status_ Water Outlet Temp [DPT_9.001] - °C
- ↕ 81: Status_ Defrost Operation [DPT_1.001] - 0-Off;1-On
- ↕ 82: Status_ Water Pump 1 Operation [DPT_1.001] - 0-Off;1-On
- ↕ 83: Status_ Water Pump 2 Operation [DPT_1.001] - 0-Off;1-On
- ↕ 84: Status_ Water Pump 3 Operation [DPT_1.001] - 0-Off;1-On
- ↕ 85: Status_ Disch. Gas Temp [DPT_9.001] - °C
- ↕ 86: Status_ Suct. Gas Temp [DPT_9.001] - °C
- ↕ 87: Status_ Gas Temp THMg [DPT_9.001] - °C
- ↕ 88: Status_ Liquid Temp THMI [DPT_9.001] - °C
- ↕ 89: Status_ Water Outlet Temp 3 [DPT_9.001] - °C
- ↕ 90: Status_ Outdoor AmbAvg Temp [DPT_9.001] - °C
- ↕ 91: Status_ Inv Oper Freq [DPT_14.033] - Hz
- ↕ 92: Status_ Indoor Exp. Valve Opening [DPT_5.001] - %
- ↕ 93: Status_ Outdoor Exp. Valve Opening [DPT_5.001] - %
- ↕ 94: Status_ Mixing Valve Position [DPT_5.001] - %
- ↕ 95: Status_ Compressor Run Current [DPT_9.021] - mA

- If “Yes” is selected (the installed unit is a Yutaki S80 model), the Control_ Unit Mode and the Status_ Unit Mode communication objects will be hidden and new communication objects will appear providing extra and specific information for the Yutaki S80.

- ↕ 96: Status_ Disch. Gas Temp R134A [DPT_9.001] - °C
- ↕ 97: Status_ Suct. Gas Temp R134A [DPT_9.001] - °C
- ↕ 98: Status_ Liquid Gas Temp R134A [DPT_9.001] - °C
- ↕ 99: Status_ Evap. Gas Temp R134A [DPT_9.001] - °C
- ↕ 100: Status_ Disch. Pressure R134A [DPT_14.058] - Pa
- ↕ 101: Status_ Suct. Pressure R134A [DPT_14.058] - Pa
- ↕ 102: Status_ Inv Oper Freq R134A [DPT_14.033] - Hz
- ↕ 103: Status_ Indoor Exp. Valve Open R134A [DPT_5.001] - %
- ↕ 104: Status_ Compressor Run Current R134A [DPT_9.021] - mA
- ↕ 105: Status_ Error Code R134A [1byte] - HI error code

For more details about the information provided by those communication objects, please check the Yutaki range user manual.

5. Technical specifications


Index

5.1. Technical specifications..... 16

5

5.1 Technical specifications

Enclosure	ABS (UL 94 HB) de 2,5 mm thick
Dimensions	70 X 70 X 28 mm
Weight	70g
Color	Ivory White
Power Supply	29V DC, 6mA (KNX bus)
External Power Supply	10-40V DC, 100mA (Recommended: 12V DC, 100 mA) Must use a NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply. Plug-in terminal block for power connection (2 poles).
Terminal wiring (for power supply and low-voltage signals)	Per terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm ² ... 2.5mm ² 2 cores: 0.5mm ² ... 1.5mm ² 3 cores: not permitted
KNX port	1 x KNX TP1 (EIB) port opto-isolated. Plug-in terminal block (2 poles). TNV-1
H-Link port	Plug-in terminal block for H-Link bus connection (2 poles) with no polarity.
LED	1 x KNX programming.
Push buttons	1 x KNX programming.
Configuration	Configuration from ETS
Operational temperature	From 0°C up to 40°C
Storage temperature	From 0°C up to 40°C
Operational humidity	25-90% at 50°C, non condensing
Isolation voltage	External Power Supply – KNX: 2500V External Power Supply – H-Link: 1500V
RoHS conformity	Compliant with RoHS directive (2002/95/CE).
Certifications	CE conformity to EMC directive (2004/108/EC) and Low-voltage directive (2006/95/EC) EN 61000-6-2; EN 61000-6-3; EN 60950-1; EN 50491-3; EN 50090-2-2; EN 50428; EN 60669-1; EN 60669-2-1

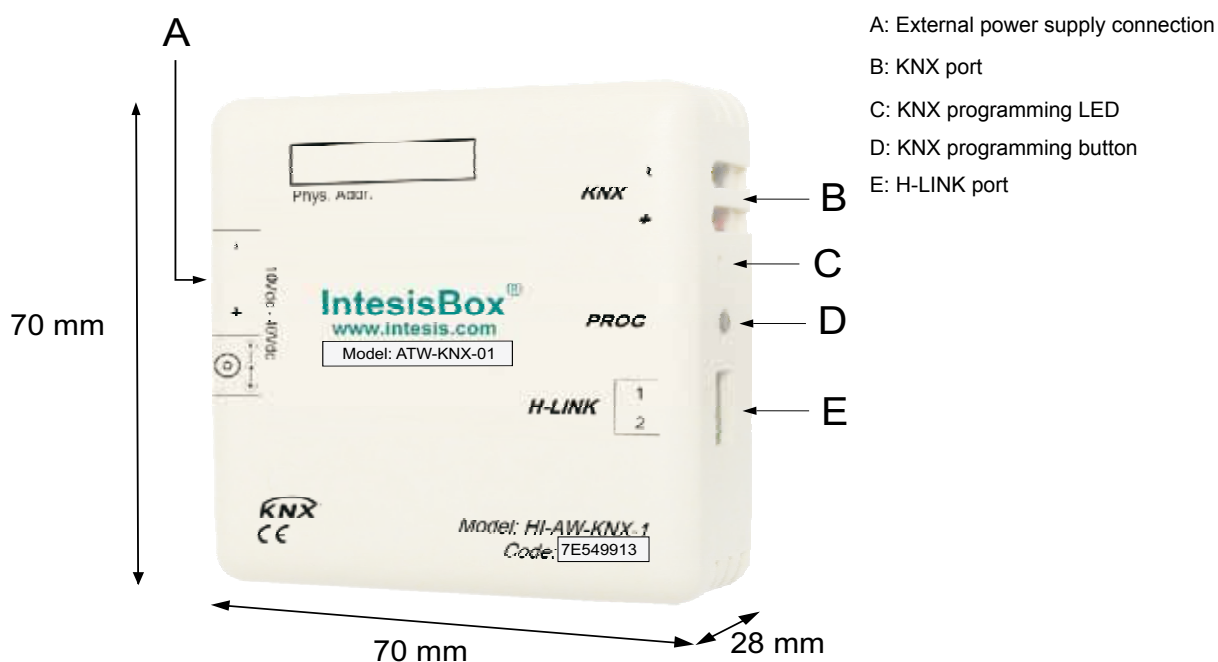

6 . Compatible Air-to-Water (ATW) units

Index

6.1. Compatible Air-to-Water (ATW) units 18



6.1 Compatible Air-to-Water (ATW) units

This device is compatible with the following models:

RWM-(2.0-10.0)FSN3E (Yutaki S)

RWM-(4.0-6.0)FS(V)NFE (Yutaki S80)

For other Yutaki models compatibility ask to Hitachi Technical Assistance.

7. Error codes

Index

7.1. Error codes.....	20
-----------------------	----

7.1 Error codes

KNX Error Code	Remote Controller Error Code	Error Description
00	N/A	No errors
65535	N/A	Communication error between ATW-KNX-01 interface and the Hitachi Unit

For other error codes check Yutaki user manual.

In case you detect an error code not listed, please contact your nearest Hitachi support center to get more information about the meaning of the error.

8 . Communication objects description table

Index

8.1. Communication objects description table..... 22

8.1.1. Control objects..... 22

8.1.2. Status objects 23

8.1 Communication objects description table

8.1.1 Control objects

Section	Object number	Name	Long.	Datapoint type		Flags				Function
				DPT_NAME	DPT_ID	R	W	T	U	
Run/Stop	0	Control_ Unit Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
Mode	1	Control_ Unit Mode	1 bit	DPT_Heat/Cool	1.100		W	T		0 - Cool; 1 - Heat
Water circuit (C1 and C2)	2/14	Control_ Cx ¹ Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
	3/15	Control_ Cx ¹ Heat OTC Mode Off	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode OFF
	4/16	Control_ Cx ¹ Heat OTC Mode Points	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode POINTS
	5/17	Control_ Cx ¹ Heat OTC Mode Grad	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode GRAD
	6/18	Control_ Cx ¹ Heat OTC Mode Fix	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode FIX
	7/19	Control_ Cx ¹ Cool OTC Mode Off	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode OFF
	8/20	Control_ Cx ¹ Cool OTC Mode Points	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode POINTS
	9/21	Control_ Cx ¹ Cool OTC Mode Fix	1 bit	DPT_Bool	1.002		W	T		1 - Set OTC Mode FIX
	10/22	Control_ Cx ¹ Thermo Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 0°C and 35°C)
	11/23	Control_ Cx ¹ Ambient Temp	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between -20°C and 40°C)
	12/24	Control_ Cx ¹ Water Heat Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 20°C and 80°C)
	13/25	Control_ Cx ¹ Water Cool Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 5°C and 21°C)
DHW	26	Control_ DHW Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
	27	Control_ DHW Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 30°C and 75°C)
Swimming pool	28	Control_ SwimPool Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
	29	Control_ SwimPool Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 24°C and 33°C)
AntiLeg	30	Control_ AntiLeg Run/Stop	1 bit	DPT_Start	1.010		W	T		0 - Stop; 1 - Run
	31	Control_ AntiLeg Setpoint	2 bytes	DPT_Value_Temp	9.001		W	T		°C (Between 50°C and 75°C)
KNX Block	32	Control_ KNX Blocks/Enables Menu	1 bit	DPT_Enable	1.003		W	T		0 - Blocks; 1 - Enables

¹ X can be 1 or 2 depending on which circuit is being controlled.

8.1.2 Status objects

Section	Object number	Name	Long.	Datapoint type		Flags				Function
				DPT_NAME	DPT_ID	R	W	T	U	
Mode	33	Status_ Unit Mode	1 bit	DPT_Heat/Cool	1.100	R		T		0 – Cool; 1 – Heat
Water Circuit (C1 and C2)	34/46	Status_ Cx Run/Stop	1 bit	DPT_Start	1.010	R		T		0 – Stop; 1 – Run
	35/47	Status_ Cx ² Heat OTC Mode Off	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode Off Set
	36/48	Status_ Cx ² Heat OTC Mode Points	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode POINTS Set
	37/49	Status_ Cx ² Heat OTC Mode Grad	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode FIX Set
	38/50	Status_ Cx ² Heat OTC Mode Fix	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode Off Set
	39/51	Status_ Cx ² Cool OTC Mode Off	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode Off Set
	40/52	Status_ Cx ² Cool OTC Mode Points	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode POINTS Set
	41/53	Status_ Cx ² Cool OTC Mode Fix	1 bit	DPT_Bool	1.002	R		T		1 – OTC Mode FIX Set
	42/54	Status_ Cx ² Thermo Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	43/55	Status_ Cx ² Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	44/56	Status_ Cx ² Water Heat Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	45/57	Status_ Cx ² Water Cool Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
DHW	58	Status_ DHW Run/Stop	1 bit	DPT_Start	1.010	R		T		0 – Stop; 1 – Run
	59	Status_ DHW Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	60	Status_ DHW Temperature	2 bytes	DPT_Value_Temp	9.001	R		T		°C
Swimming pool	61	Status_ SwimPool Run/Stop	1 bit	DPT_Start	1.010	R		T		0 – Stop; 1 – Run
	62	Status_ SwimPool Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	63	Status_ SwimPool Temperature	2 bytes	DPT_Value_Temp	9.001	R		T		°C
AntiLeg	64	Status_ AntiLeg Run/Stop	1 bit	DPT_Start	1.010	R		T		0 – Stop; 1 – Run
	65	Status_ AntiLeg Setpoint	2 bytes	DPT_Value_Temp	9.001	R		T		°C
KNX Block	66	Status_ KNX Block/Enable Menu	1 bit	DPT_Enable	1.003	R		T		0 – Block; 1 – Enable
Error and alarms	67	Status_ Error/Alarm	1 bit	DTP_Alarm	1.005	R		T		0 - No Alarm; 1 - Alarm
	68	Status_ Error Code	2 bytes	Enumerated		R		T		0 – No error; Other values see 7

Section	Object number	Name	Long.	Datapoint type		Flags				Function
				DPT_NAME	DPT_ID	R	W	T	U	
Extra Information	69	Status_ Operation State Unit On/Off	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	70	Status_ Operation State Cool Demand	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	71	Status_ Operation State Cool Thermo	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	72	Status_ Operation State Heat Demand	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	73	Status_ Operation State Heat Thermo	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	74	Status_ Operation State DHW	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	75	Status_ Operation State Swim Pool	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	76	Status_ Operation State Alarm	1 bit	DTP_Alarm	1.005	R		T		0 - No Alarm; 1 - Alarm
	77	Status_ Outdoor Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	78	Status_ Second Ambient Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	79	Status_ Water Inlet Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	80	Status_ Water Outlet Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	81	Status_ Defrost Operation	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	82	Status_ Water Pump 1 Operation	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	83	Status_ Water Pump 2 Operation	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	84	Status_ Water Pump 2 Operation	1 bit	DPT_Switch	1.001	R		T		0 - Off; 1-On
	85	Status_ Dish. Gas Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	86	Status_ Suct. Gas Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	87	Status_ Gas Temp THMg	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	88	Status_ Liquid Temp THMI	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	89	Status_ Water Outlet Temp 3	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	90	Status_ Outdoor AmbAvg Temp	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	91	Status_ Inv Oper Freq	2 bytes	DPT_Value_Frequency	14.033	R		T		Hz
	92	Status_ Indoor Exp Valve Opening	1 byte	DPT_Scaling	5.001	R		T		%
	93	Status_ Outdoor Exp Valve Opening	1 byte	DPT_Scaling	5.001	R		T		%
	94	Status_ Mixing Valve Position	1 byte	DPT_Scaling	5.001	R		T		%
	95	Status_ Compressor Run Current	2 bytes	DPT_Value_Cur	9.021	R		T		mA
Extra Information Yutake S80	96	Status_ Dish. Gas Temp R134A	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	97	Status_ Suct. Gas Temp R134A	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	98	Status_ Liquid Temp R134A	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	99	Status_ Evap. Gas Temp R134A	2 bytes	DPT_Value_Temp	9.001	R		T		°C
	100	Status_ Disch. Pressure R134A	2 bytes	DPT_Value_Pressure	14.058	R		T		Pa
	101	Status_ Suct. Pressure R134A	2 bytes	DPT_Value_Pressure	14.058	R		T		Pa
	102	Status_ Suct. Pressure R134A	2 bytes	DPT_Value_Frequency	14.033	R		T		Hz
	103	Status_ Indoor Exp Valve Open R134A	1 byte	DPT_Scaling	5.001	R		T		%
	104	Status_ Compressor Run Current R134A	2 bytes	DPT_Value_Cur	9.021	R		T		A
	105	Status_ Compressor Run Current R134A	2 bytes	Enumerated		R		T		0 – No error; Other values see 7

² X can be 1 or 2 depending on which circuit is being controlled.

Hitachi Air Conditioning Products Europe, S.A.U.
Ronda Shimizu, 1 - Polig. Ind. Can Torrella
08233 Vacarisses (Barcelona) Spain



Hitachi certifies that our products have met EU consumer safety, health and environmental requirements.



Hitachi Air Conditioning Products Europe, S.A.U. is certified with:
ISO 9001 of AENOR, Spain for its Quality Management accordance with the standard
ISO 14001 of AENOR Spain for its Environmental Management systems accordance with the standard



Hitachi air conditioning products are manufactured according to:
ISO 9001 of JQA, Japan for its Quality Management accordance with the standard
ISO 14001 of JACO, Japan for its Environmental Management accordance with the standard